



USER GUIDE

2.92mm Coaxial Calibration Kit

DC to 40 GHz

Model 8770CK30/31



USER GUIDE

2.92mm Coaxial Calibration Kit

DC to 40 GHz

Model: 8770CK30/31

Please note: This manual applies to all 8770CK30/31 kits that have serial numbers 3444 and higher. For kits with serial numbers lower than 3444, please refer to this manual: *8770-531*.



2900 Inland Empire Boulevard
Ontario, California 91764-4804 USA
Telephone: (909) 987-4715
Facsimile: (909) 987-1112

maurymw.com

8770-532 (A) 03/16

Copyright © 2016 Maury Microwave Corporation. All rights reserved.



Warranty

Maury Microwave hardware products are warranted against defects in materials and workmanship for a period of one year from date of shipment. During the warranty period, Maury Microwave will, at its option, either repair or replace products which prove to be defective.

Maury Microwave software products are warranted against defects in material and workmanship of the media on which the product is supplied for a period of ninety (90) days from date of shipment. Maury also warrants that the product shall operate substantially in accordance with published specifications during the same warranty period. During the warranty period, Maury Microwave will, at its option, either repair or replace products which prove to be defective. Maury does not warrant that the operation of the product shall be uninterrupted or error-free.

For warranty service or repair, all products must be returned to Maury Microwave and must be issued a return authorization number by Maury prior to shipment. Buyer shall prepay shipping charges to Maury. Obligation is limited to the original Buyer.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or wear resulting from normal use. No other warranty is expressed or implied. Maury Microwave specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

The remedies provided herein are the Buyer's sole and exclusive remedies. Maury Microwave shall not be liable for any direct, indirect, special, incidental, or consequential damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or any other financial loss) arising out of the Buyer's use of or inability to use the product, even if Maury or an authorized Maury dealer has been advised of the possibility of such damages.



CONTENTS

GENERAL INFORMATION.....	1
<i>Calibration Kit Description.....</i>	<i>1</i>
<i>Maintenance.....</i>	<i>1</i>
<i>Calibration.....</i>	<i>1</i>
<i>Supporting Test Port Adapters.....</i>	<i>1</i>
<i>Electrostatic Discharge Precautions.....</i>	<i>1</i>
<i>Connector Description.....</i>	<i>2</i>
<i>Connector Care.....</i>	<i>2</i>
<i>Connector Tightening.....</i>	<i>3</i>
<i>TRL Calibration.....</i>	<i>4</i>
<i>TRM/TRL/LRL Calibration.....</i>	<i>5</i>
<i>Other Examples of TRL Calibrations.....</i>	<i>6</i>
<i>Verifying Calibration Accuracy by Measuring Source Match.....</i>	<i>7</i>
<i>Calibration Kit Contents.....</i>	<i>8</i>
STANDARD DEFINITIONS.....	10
<i>Anritsu Network Analyzers.....</i>	<i>10</i>
<i>Keysight Network Analyzers.....</i>	<i>12</i>
<i>Rhode & Schwarz Network Analyzers.....</i>	<i>13</i>
APPENDIX.....	16
<i>Data Sheet Resources.....</i>	<i>16</i>
CONTACTS.....	17
<i>Corporate.....</i>	<i>17</i>
<i>Sales.....</i>	<i>17</i>
<i>Customer Support.....</i>	<i>17</i>
<i>Website.....</i>	<i>17</i>
<i>Web Resources.....</i>	<i>17</i>



TABLES

Table 1. Calibration Type as a Function of Frequency	4
Table 2. Male Standard Definitions for Anritsu	10
Table 3. Female Standard Definitions for Anritsu.....	10
Table 4. Standard Definitions for Keysight	12
Table 5. Standard Definitions for Rohde & Schwarz	13
Table 6: Peak-to-Peak Ripple (dB) vs. Source Match vs. VSWR	14

FIGURES

Figure 1. Using the Torque Wrench	3
Figure 2. TRM/TRL/LRL Calibration	5



GENERAL INFORMATION

Calibration Kit Description

This series of **2.92mm** coaxial calibration kits is designed to provide accurate calibrations of network analyzers in the **DC to 40.0 GHz** range. Each of these kits includes all the necessary calibration standards and associated hardware needed for the accurate calibration of most network analyzers.

Refer to the ***Calibration Kits Contents*** section (see Appendix, Date Sheet Resources) for information on included components and available kit options.

NOTE: This document, calibration constants software, and data sheet can be downloaded from our website:
maurymw.com

NOTE: Legacy analyzer software is not on our website but is available for purchase.

Maintenance

This calibration kit is relatively maintenance free if the components are handled with the same care that is appropriate to all precision equipment. As with any precision component, proper care should be taken to assure clean mating surfaces, correct alignment when mating, and proper torquing of connectors or waveguide coupling screws. To help maintain the integrity of the components in this kit, routine visual inspection and cleaning of mating surfaces is recommended. Failure to do so may result in degraded repeatability and accuracy, as well as damage any mated devices.

Calibration

To maintain verification that a calibration kit is performing to traceable specifications, we recommend that all kits be periodically returned to Maury Microwave for calibration. The typical calibration cycle is one year, although actual need may vary depending on usage.

Supporting Test Port Adapters

When configuring a test setup, be sure that damaging stresses are not applied to the connectors on the test set. This is particularly critical when the attached components are heavy or long. Always properly support the test port adapters being used.

Electrostatic Discharge Precautions

Protection against electrostatic discharge (ESD) is essential while inspecting, cleaning, or making connections to connectors attached to a static-sensitive circuit, such as those found inside test sets.

When handling the connectors on the test set, be aware that you are coming in contact with exposed center conductors that are connected directly to the static-sensitive internal circuits of the network analyzer. Make sure that you and your equipment are well-grounded before inspecting, cleaning, or making connections to test set ports. Standard ESD precautions, such as the use of grounded wrist straps and grounded antistatic mats, are recommended.



Connector Description

The **2.92mm** connector is a precision miniature air line interface connector that operates mode free to 40 GHz. It is mechanically compatible with SMA and 3.5mm connectors. The 2.92mm connector was originally introduced by Maury in 1974 as the MPC3 connector and reintroduced by Anritsu in 1984 as the 'K' connector, as it is now known today.

Connector Care

Precision connectors must be handled carefully if accurate calibrations and measurements are to be obtained. All connectors should be inspected prior to each use. For optimum measurement results, all interfaces should be visually inspected under magnification and cleaned on a regular basis. Proper connector contact pin depths should also be verified through regular inspections using a connector gage, such as the Maury Microwave **A050A** connector gage kit, to insure that the connectors on both calibration devices and devices under test (DUTs) have contact pin depths within recommended tolerances. Refer to Maury data sheet **5E-063** (available on our website) for proper pin depth specifications.

- Care should be used whenever aligning connectors. Tighten connector coupling nuts using an appropriate torque wrench while holding the opposing connector with an open-end wrench.
- When disconnecting devices, take care not to rock or bend any of the connections. Disconnect devices by disengaging the coupling nuts and gently pulling the connectors apart in a straight line.
- Always use protective covers on all connectors when devices are not in use.
- Should a connector become damaged, it should be repaired before it is used any further or replaced immediately. A damaged connector can damage other mated connectors.



Connector Tightening

Damage to a calibration device or attaching connector can occur if the device is turned instead of the connector nut. ALWAYS turn the nut when making connections. Never turn the device itself.

Always use a torque wrench (Maury model **8799A1**) to final-tighten all connections. This will insure calibration accuracy and measurement repeatability.

When making connections, a **5/16 inch** open-end wrench or a **7/16 inch** open-end wrench may be required to hold the body of one device stationary while torquing the nut on the other device or cable. Both of these open-end wrenches are supplied with this calibration kit for this purpose.

Using the torque wrench:

- Hand-tighten the connection to be torqued by holding the calibration device steady and turning only the nut.
- Hold the torque wrench with your thumb and index finger, behind the groove in the handle (see Error! Reference source not found.).
- Tighten the connection until the ball in the handle crests on the cam (as the handle begins to break). Do not “fully break” the handle of the torque wrench to reach the specified torque.
- Reverse the previous procedure to disconnect the connection.

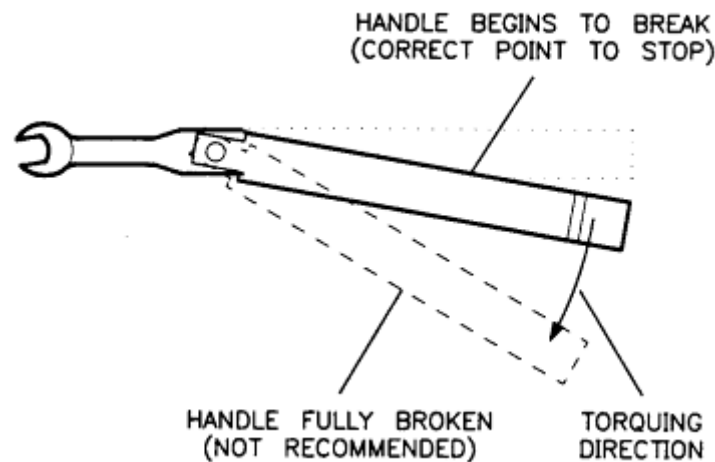


Figure 1: Using the Torque Wrench



TRL Calibration

- TRL is a general term used in this application to mean TRM/TRL/LRL.
- TRM means Thru, Reflect, Match.
- TRL means Thru, Reflect, Line.
- LRL means Line, Reflect, Line.

In practice, TRM is used for low frequencies where a very long air line would be required for the line standard. TRL is used for mid frequencies, and LRL is used for high frequencies where air line standards become too short to be practical. Your TRL-kit is equipped with four (4) air lines for making TRL/LRL calibrations.

Table 1 shows the calibration type required as a function of frequency. A network analyzer can be calibrated over the entire frequency range up to **40 GHz** using a combination of these techniques. This calibration approach results in the best directivity and source match with these three calibration types and is recommended for the highest degree of accuracy.

Table 1: Calibration Type as a Function of Frequency

Frequency Range	Type of Calibration	Calibration Standards
DC — 800 MHz	TRM	Fixed Termination
160 MHz — 800 MHz	TRL	15cm Air Line
800 MHz — 2.5 GHz	TRL	5cm Air Line
2.5 GHz — 12.5 GHz	LRL	5cm & 6cm Air Lines
12.5 GHz — 40.0 GHz	LRL	5cm & 5.25cm Air Lines

NOTE: The TRL-kit air line lengths are designed to meet NIST and Keysight recommendations of 30 degrees phase margin.



TRM/TRL/LRL Calibration

To calibrate a network analyzer over the entire frequency range with the highest degree of accuracy, perform the following steps (see **Table 1** and **Figure 2**):

- Perform a TRM (through-reflect-match) calibration from the lowest frequency of your network analyzer to 160 MHz using the fixed termination, thru connection and short circuit termination.
- Perform a TRL (through-reflect-line) calibration from 160 MHz to 800 MHz using the through connection and 15cm air line.
- Perform a TRL (through-reflect-line) calibration from 0.8 GHz to 2.5 GHz using the through connection and 5cm air line.
- Perform an LRL calibration from 2.5 GHz to 12.5 GHz using the 5cm air lines (as the thru reference) and the 6cm air line. Use caution to select the correct air line. They are not interchangeable.
- Perform an LRL calibration from 12.5 GHz to 40.0 GHz using the 5cm air line (as the through reference) and the 5.25cm air line. Use caution to select the correct air line. They are not interchangeable (see the following notes).

NOTE: All the air lines are labeled. Use extreme caution not to mix up the center conductors to avoid damage. For detailed TRL calibration instructions, you should refer to your network analyzer operating manual.

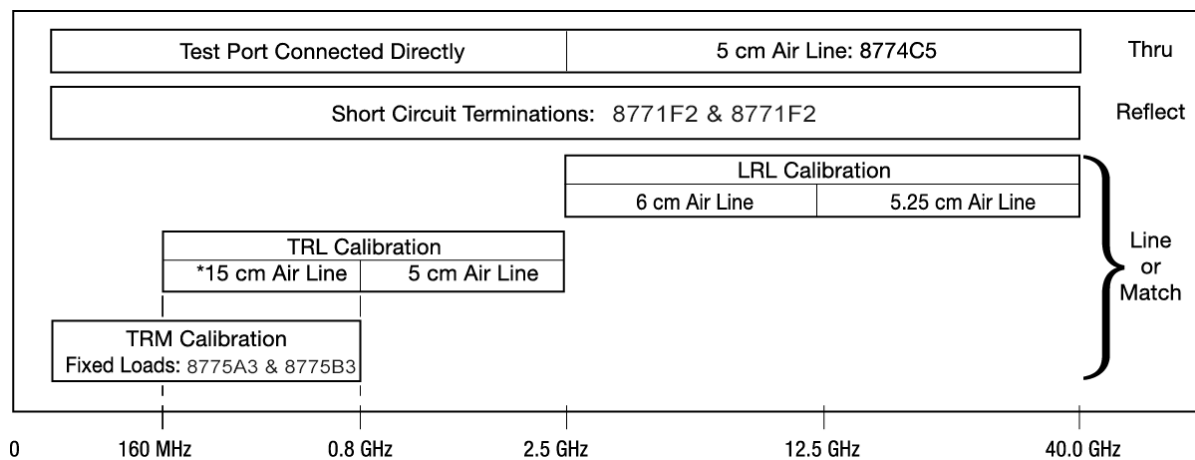


Figure 2: TRM/TRL/LRL Calibration



Other Examples of TRL Calibrations

Narrower bandwidths will only require the standards in **Figure 2** even though the analyzer will always list all of the possible standards. For example, to calibrate from 800 MHz to 2.5 GHz, only a through connection (test ports connected together), short, and the 5cm line are needed for calibration. The following examples illustrate the type of calibration and the air lines required as a function of frequency:

1. To calibrate from 160 MHz - 800 MHz, perform a TRL calibration using the 15cm air line.
2. To calibrate from 2 - 18 GHz requires multiple calibrations as follows:
 - a. Perform a TRL calibration from 2 - 2.5 GHz using the 5cm air line.
 - b. Perform a TRL calibration from 2.5 - 12.5 GHz using the 5cm air line (as the thru reference) and the 6cm air line.
 - c. Perform an LRL calibration from 12.5 - 18 GHz using the 5cm air line (as the thru reference) and the 5.25cm air line.

NOTE: Use caution to avoid getting the air lines mixed up. Use extreme care to not interchange the center conductors (this will result in damage).



Verifying Calibration Accuracy by Measuring Source Match

An easy way to check that your calibration went well is to measure source match. During each of the calibration methods, a short circuit was connected to the test port(s). Following calibration, if the short circuit is reconnected to the test port and the analyzer is set to measure S11 (displayed in dB); we'd expect to see a straight line with very little loss. If we inserted an air line between the short and the test port, we'd expect to see a straight line with more loss, with the loss increasing with frequency. What you will actually see is some ripple caused by the residual reflections of the test port interacting with the reflections from the short. This ripple shows the combined effects of both source match and directivity. For TRL/LRL calibrations, source match and directivity are about the same level. For OSL calibrations, directivity is typically 6 to 10 dB better than the source match. The amount of ripple usually ranges from 0.02 dB peak-to-peak (a very good calibration) to 1 dB peak-to-peak (not a very good calibration). TRL/LRL calibrations will yield the best results and fixed load calibrations will yield the worst.

Source match can be measured as follows:

- a. Connect the 15cm air line to the measurement port, terminated with the appropriate short circuit.
- b. Measure the return loss and adjust the scale resolution to detect the ripple pattern on the Return Loss display (typically 0.1 - 0.2 dB, peak-to-peak).
- c. Measure the peak-to-peak amplitude of the ripple pattern. To adjust for slope, measure two peaks on each side of a valley and average.
- d. Use **Table 6** to convert peak-to-peak ripple to source match.



Calibration Kit Contents

Standard Components – 8770CK30

1 ea	Short, female	8771F2
1 ea	Short, male	8772F2
1 ea	Fixed Termination, female	8775A3
1 ea	Fixed Termination, male	8775B3
1 ea	Female to male air line (5cm)	8774C5
1 ea	Female to male air line (5.25cm)	8774C5.25
1 ea	Female to male air line (6cm)	8774C6
1 ea	Female to male air line (15cm)	8774C15
1 ea	5/16 Torque Wrench, 8in.lbs	8799A1
1 ea	Wrench, 5/16	8770Z6
1 ea	Wrench, 7/16	8770Z7
1 ea	Case Assembly	

Standard Components – 8770CK31

1 ea	Short, female	8771F2
1 ea	Short, male	8772F2
1 ea	Fixed Termination, female	8775A3
1 ea	Fixed Termination, male	8775B3
1 ea	Adapter, male to male	8714B2
1 ea	Adapter, female to male	8714C2
1 ea	Adapter, female to female	8714A2
1 ea	Female to male air line (5cm)	8774C5
1 ea	Female to male air line (5.25cm)	8774C5.25
1 ea	Female to male air line (6cm)	8774C6
1 ea	Female to male air line (15cm)	8774C15
1 ea	5/16 Torque Wrench, 8in.lbs	8799A1
1 ea	Wrench, 5/16	8770Z6
1 ea	Wrench, 7/16	8770Z7
1 ea	Case Assembly	



General Information

(This page intentionally left blank)



STANDARD DEFINITIONS

Anritsu Network Analyzers

Table 2: Male Standard Definitions for Anritsu

Male Short Device	
L0	8.7413 e-12
L1	-1036.9 e-24
L2	41.5223 e-33
L3	-0.5055 e-42
Offset Length	0.50054 cm
Serial Number	00000

Table 3. Female Standard Definitions for Anritsu

Female Short Device	
L0	-11.2831 e-12
L1	1910.57 e-24
L2	-85.3145 e-33
L3	1.0864 e-42
Offset Length	0.50054 cm
Serial Number	00000

For specific loading instructions, see ***Anritsu loading instructions***, which can be downloaded from our website: maurymw.com.



(This page intentionally left blank)

Keysight Network Analyzers

Table 4: Standard Definitions for Keysight

Standard ⁽¹⁾		C0 x10 ⁻¹⁵ F	C1 x10 ⁻²⁷ F/Hz	C2 x10 ⁻³⁶ F/Hz ²	C3 x10 ⁻⁴⁵ F/Hz ³	Fixed or Sliding ⁽²⁾	Offset			Frequency GHz		Coax or W/G	Standard Label
Type	Description	L0 x10 ⁻¹² H	L1 x10 ⁻²⁴ H/Hz	L2 x10 ⁻³³ H/Hz ²	L3 x10 ⁻⁴² H/Hz ³		Delay ps	Z ₀ ⁽³⁾ Ω	Loss ⁽⁴⁾ GΩ/s	Min	Max		
Short	8771F2 Female Short	-11.2831	1910.57	-85.3145	1.0864		16.6963	50	2.0059	0	999	Coax	8771F2
Open	8773A2 Female Open	42.9684	729.336	-31.7551	0.6628		14.8487	50	3.4628	0	999	Coax	8773A2
Load	8775A3 Broadband Female Load					Fixed	0	50	0	0	999	Coax	8775A3 BB
Thru	Thru (0 cm)						0	50	0	0	999	Coax	Thru ⁽⁵⁾
Load	8777A2 Sliding Female Load					Sliding	0	50	0	3.999	999	Coax	8777A2
Load	8775A3 Lowband Female Load					Fixed	0	50	0	0	4.001	Coax	8775A3 LB
Short	8772F2 Male Short	8.7413	-1036.9	41.5223	-0.5055		16.6963	50	2.5639	0	999	Coax	8772F2
Open	8773B2 Male Open	44.1578	71.4204	-0.1716	0.2048		14.8487	50	3.39	0	999	Coax	8773B2
Load	8775B3 Broadband Male Load					Fixed	0	50	0	0	999	Coax	8775B3 BB
Load	8777B2 Sliding Male Load					Sliding	0	50	0	3.999	999	Coax	8777B2
Load	8775B3 Lowband Male Load					Fixed	0	50	0	0	4.001	Coax	8775B3 LB

⁽¹⁾ Open, short, load, delay/thru, or arbitrary impedance.

⁽²⁾ Load or arbitrary impedance only.

⁽³⁾ Z₀ normalized.

⁽⁴⁾ Skin loss factor, normalized at 1 GHz.

⁽⁵⁾ Test ports connected directly.

For specific loading instructions, see **Keysight loading instructions**, which can be downloaded from our website:





Rhode & Schwarz Network Analyzers

Table 5: Standard Definitions for Rohde & Schwarz

Short (M) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 5.005 mm Loss = 0.0074364 dB/ $\sqrt{\text{GHz}}$ L0 = 8.7413 pH L1 = -1.0369000 pH/GHz L2 = -0.0415223 pH/GHz ² L3 = -0.0005055 pH/GHz ³	Through (MF) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 0 mm Loss = 0 dB/ $\sqrt{\text{GHz}}$
Short (F) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 5.005 mm Loss = 0.0058180 dB/ $\sqrt{\text{GHz}}$ L0 = -11.2831 pH L1 = 1.9105700 pH/GHz L2 = -0.0853145 pH/GHz ² L3 = 0.0010864 pH/GHz ³	Through (MM) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 17.155 mm Loss = 0.0114 dB/ $\sqrt{\text{GHz}}$
Open (M) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 4.452 mm Loss = 0.0087444 dB/ $\sqrt{\text{GHz}}$ C0 = 44.1578 fF C1 = 0.0714204 fF/GHz C2 = -0.0001716 fF/GHz ² C3 = 0.0002048 fF/GHz ³	Through (FF) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 17.155 mm Loss = 0.0114 dB/ $\sqrt{\text{GHz}}$
	Match (M) Min Freq = 0 Hz Max Freq = 40.0 GHz
Open (F) Min Freq = 0 Hz Max Freq = 40.0 GHz Length = 4.452 mm Loss = 0.0089322 dB/ $\sqrt{\text{GHz}}$ C0 = 42.9684 fF C1 = 0.7293360 fF/GHz C2 = -0.0317551 fF/GHz ² C3 = 0.0006628 fF/GHz ³	Match (F) Min Freq = 0 Hz Max Freq = 40.0 GHz
	Sliding Match (M) Min Freq = 4.0 GHz Max Freq = 40.0 GHz
	Sliding Match (F) Min Freq = 4.0 GHz Max Freq = 40.0 GHz

For specific loading instructions, see **Rohde & Schwarz loading instructions**, which can be downloaded from our website: maurymw.com.



Table 6: Peak-to-Peak Ripple (dB) vs. Source Match vs. VSWR

P-P	SM	VSWR	P-P	SM	VSWR	P-P	SM	VSWR	P-P	SM	VSWR	P-P	SM	VSWR
0.001	84.8	1.000	0.051	50.7	1.006	0.102	44.7	1.012	0.205	38.6	1.024	0.455	31.8	1.053
0.002	78.8	1.000	0.052	50.5	1.006	0.104	44.5	1.012	0.210	38.4	1.024	0.460	31.7	1.054
0.003	75.3	1.000	0.053	50.3	1.006	0.106	44.3	1.012	0.215	38.2	1.025	0.465	31.6	1.054
0.004	72.8	1.000	0.054	50.2	1.006	0.108	44.2	1.012	0.220	38.0	1.025	0.470	31.5	1.055
0.005	70.8	1.001	0.055	50.0	1.006	0.110	44.0	1.013	0.225	37.8	1.026	0.475	31.4	1.055
0.006	69.2	1.001	0.056	49.8	1.006	0.112	43.8	1.013	0.230	37.6	1.027	0.480	31.3	1.056
0.007	67.9	1.001	0.057	49.7	1.007	0.114	43.7	1.013	0.235	37.4	1.027	0.485	31.2	1.057
0.008	66.7	1.001	0.058	49.5	1.007	0.116	43.5	1.013	0.240	37.3	1.028	0.490	31.1	1.057
0.009	65.7	1.001	0.059	49.4	1.007	0.118	43.4	1.014	0.245	37.1	1.028	0.495	31.0	1.058
0.010	64.8	1.001	0.060	49.2	1.007	0.120	43.2	1.014	0.250	36.9	1.029	0.500	30.9	1.058
0.011	64.0	1.001	0.061	49.1	1.007	0.122	43.1	1.014	0.255	36.7	1.030	0.505	30.9	1.059
0.012	63.2	1.001	0.062	49.0	1.007	0.124	43.0	1.014	0.260	36.6	1.030	0.510	30.8	1.060
0.013	62.5	1.001	0.063	48.8	1.007	0.126	42.8	1.015	0.265	36.4	1.031	0.515	30.7	1.060
0.014	61.9	1.002	0.064	48.7	1.007	0.128	42.7	1.015	0.270	36.2	1.031	0.520	30.6	1.061
0.015	61.3	1.002	0.065	48.6	1.007	0.130	42.6	1.015	0.275	36.1	1.032	0.525	30.5	1.061
0.016	60.7	1.002	0.066	48.4	1.008	0.132	42.4	1.015	0.280	35.9	1.032	0.530	30.4	1.062
0.017	60.2	1.002	0.067	48.3	1.008	0.134	42.3	1.015	0.285	35.8	1.033	0.535	30.4	1.063
0.018	59.7	1.002	0.068	48.2	1.008	0.136	42.2	1.016	0.290	35.6	1.034	0.540	30.3	1.063
0.019	59.2	1.002	0.069	48.0	1.008	0.138	42.0	1.016	0.295	35.5	1.034	0.545	30.2	1.064
0.020	58.8	1.002	0.070	47.9	1.008	0.140	41.9	1.016	0.300	35.3	1.035	0.550	30.1	1.064
0.021	58.4	1.002	0.071	47.8	1.008	0.142	41.8	1.016	0.305	35.2	1.035	0.555	30.0	1.065
0.022	58.0	1.003	0.072	47.7	1.008	0.144	41.7	1.017	0.310	35.0	1.036	0.560	30.0	1.066
0.023	57.6	1.003	0.073	47.5	1.008	0.146	41.5	1.017	0.315	34.9	1.037	0.565	29.9	1.066
0.024	57.2	1.003	0.074	47.4	1.009	0.148	41.4	1.017	0.320	34.8	1.037	0.570	29.8	1.067
0.025	56.8	1.003	0.075	47.3	1.009	0.150	41.3	1.017	0.325	34.6	1.038	0.575	29.7	1.067
0.026	56.5	1.003	0.076	47.2	1.009	0.152	41.2	1.018	0.330	34.5	1.038	0.580	29.7	1.068
0.027	56.2	1.003	0.077	47.1	1.009	0.154	41.1	1.018	0.335	34.4	1.039	0.585	29.6	1.068
0.028	55.9	1.003	0.078	47.0	1.009	0.156	41.0	1.018	0.340	34.3	1.040	0.590	29.5	1.069
0.029	55.6	1.003	0.079	46.9	1.009	0.158	40.9	1.018	0.345	34.1	1.040	0.595	29.5	1.070
0.030	55.3	1.003	0.080	46.8	1.009	0.160	40.8	1.019	0.350	34.0	1.041	0.600	29.4	1.070
0.031	55.0	1.004	0.081	46.6	1.009	0.162	40.6	1.019	0.355	33.9	1.041	0.605	29.3	1.071
0.032	54.7	1.004	0.082	46.5	1.009	0.164	40.5	1.019	0.360	33.8	1.042	0.610	29.2	1.071
0.033	54.4	1.004	0.083	46.4	1.010	0.166	40.4	1.019	0.365	33.6	1.042	0.615	29.2	1.072
0.034	54.2	1.004	0.084	46.3	1.010	0.168	40.3	1.019	0.370	33.5	1.043	0.620	29.1	1.073
0.035	53.9	1.004	0.085	46.2	1.010	0.170	40.2	1.020	0.375	33.4	1.044	0.625	29.0	1.073
0.036	53.7	1.004	0.086	46.1	1.010	0.172	40.1	1.020	0.380	33.3	1.044	0.630	29.0	1.074
0.037	53.4	1.004	0.087	46.0	1.010	0.174	40.0	1.020	0.385	33.2	1.045	0.635	28.9	1.074
0.038	53.2	1.004	0.088	45.9	1.010	0.176	39.9	1.020	0.390	33.1	1.045	0.640	28.8	1.075
0.039	53.0	1.004	0.089	45.8	1.010	0.178	39.8	1.021	0.395	33.0	1.046	0.645	28.8	1.076
0.040	52.8	1.005	0.090	45.7	1.010	0.180	39.7	1.021	0.400	32.9	1.047	0.650	28.7	1.076
0.041	52.6	1.005	0.091	45.6	1.011	0.182	39.6	1.021	0.405	32.7	1.047	0.655	28.6	1.077
0.042	52.3	1.005	0.092	45.5	1.011	0.184	39.5	1.021	0.410	32.6	1.048	0.660	28.6	1.077
0.043	52.1	1.005	0.093	45.5	1.011	0.186	39.5	1.022	0.415	32.5	1.048	0.665	28.5	1.078
0.044	51.9	1.005	0.094	45.4	1.011	0.188	39.4	1.022	0.420	32.4	1.049	0.670	28.4	1.079
0.045	51.7	1.005	0.095	45.3	1.011	0.190	39.3	1.022	0.425	32.3	1.050	0.675	28.4	1.079
0.046	51.6	1.005	0.096	45.2	1.011	0.192	39.2	1.022	0.430	32.2	1.050	0.680	28.3	1.080
0.047	51.4	1.005	0.097	45.1	1.011	0.194	39.1	1.022	0.435	32.1	1.051	0.685	28.3	1.080
0.048	51.2	1.006	0.098	45.0	1.011	0.196	39.0	1.023	0.440	32.0	1.051	0.690	28.2	1.081
0.049	51.0	1.006	0.099	44.9	1.011	0.198	38.9	1.023	0.445	31.9	1.052	0.695	28.1	1.082
0.050	50.8	1.006	0.100	44.8	1.012	0.200	38.8	1.023	0.450	31.8	1.052	0.700	28.1	1.082



(This page intentionally left blank)



APPENDIX

Data Sheet Resources

2Z-058 – 2.92mm Calibration Kits

<http://maurymw.com/pdf/datasheets/2Z-058.pdf>

2Y-001 – Connector Gages and Connector Gage Kits

<http://maurymw.com/pdf/datasheets/2Y-001.pdf>

2Y-049 – Metrology Grade 2.92/2.92mm Digital Connector Gage Kit

<http://maurymw.com/pdf/datasheets/2Y-049.pdf>

2Y-050A – Torque Wrenches

<http://maurymw.com/pdf/datasheets/2Y-050A.pdf>

5E-063 – Precision 2.92mm Coaxial Connectors

<http://maurymw.com/pdf/datasheets/5E-063.pdf>



CONTACTS

Corporate

Maury Microwave Corporation
2900 Inland Empire Boulevard
Ontario, California 91764-4804
United States of America

Tel. 909-987-4715
Fax 909-987-5855
Email maury@maurymw.com

Sales

Tel. 909-204-3224
Fax 909-987-1112
Email maury@maurymw.com

Customer Support

Tel. 909-204-3283
Fax 909-987-1112
Email support@maurymw.com

Website <http://www.maurymw.com>

Web Resources

Maury Calibration Kits
http://maurymw.com/Precision/VNA_Cal_Kits.php

Maury Precision Coaxial and Waveguide-to-Coaxial Adapters
http://maurymw.com/Finder/Adapter_Finder.php

Maury Applications Notes Library & Technical Articles Archive
<http://maurymw.com/Support/tech-support.php>

Maury Sales Representative Finder
<http://maurymw.com/Support/find-sales-rep.php>

Visit our website for additional product information and literature.